


1. Which Sidewear™ is Right For You?

The following measurements are given as selection guidelines:

1.182" to 1.70" (30mm to 43mm)

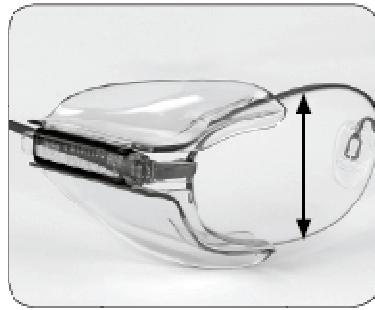


Best fit for:

- ☒ Small Frames
- ☒ Medium Frames
- ☐ Large Frames

The following measurements are given as selection guidelines:


1.25" to 2.125" (32mm to 54mm)

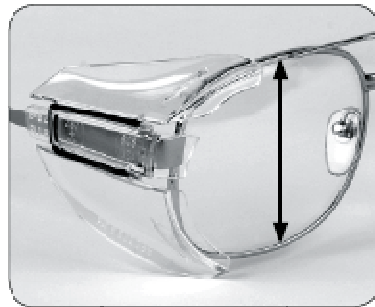

Best fit for:

- ☐ Small Frames
- ☒ Medium Frames
- ☒ Large Frames

2. Adjustment is Simple

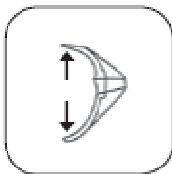


Larger Frames:

Open Sideshield until slightly smaller than frame size and install.



Average Frames:


Ensure Sideshield is slightly smaller than frame size and install.

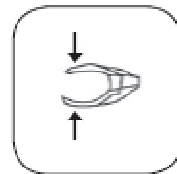


Smaller Frames:

Close Sideshield until slightly smaller than frame size and install.

3. Mounting is Easy

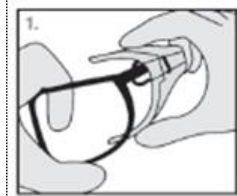

1. Insert LEFT temple through large loop of the black mounting rubber band on the inside of the LEFT sideshield.(Fig.1)

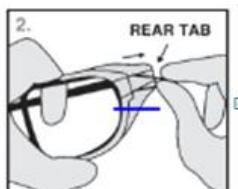

2. Hold frame and sideshield firmly while stretching the rubber band outward and back to fit into the retaining grooves and over the rear tab.(Fig. 2)

3. Inspect the sideshield alignment to be certain the frame is centred between the top and bottom ribs. Then, repeat these steps for the right side.

4. The sideshields are now affixed to the frame front and temples will fold without the sideshields moving.